



Gateway Integrated Equipment (Wired)

Lane 3600 and Lane 3600 Deluxe

1 Verify applicable hardware is included in the shipment.

a. Terminal/PinPad Unit



b. Power adapter plug and cable



c. Ingenico cable



2 Plug (a.) power adapter cable into standard wall outlet or a power strip/surge protector (recommended). Plug the other end into the Ingenico Cable (b.).



3 Plug the Ingenico Cable ethernet (male end) into router/modem or ethernet hub/switch.



4 Plug the Ingenico Cable HDMI port (single end) into back of the Terminal/PinPad unit.



The unit will boot up and go through 1-3 boot cycles. Upon completion, the unit will remain on the Fortis logo screen. This process may take several minutes depending on internet connection speeds.



5 Once unit is powered on and the Fortis logo remains on the screen, the Terminal/PinPad is ready for use on Fortis Gateway and/or integrated solution.

