



# Gateway Integrated Equipment (Wireless)

## Link 2500, Move 5000

**1** Verify applicable hardware is included in the shipment.

a. Terminal/PinPad Unit



Link 2500



Move 5000

b. Power adapter plug and cable




Link 2500  
Wall adapter  
USB A to USB C



Move 5000  
Power cable

**2** Plug the power adapter cable into a standard wall outlet or power strip/surge protector (recommended) and then plug in the terminal.

a. Link 2500: Assemble adapter by sliding plug into the base and plug USB A cable into base. Open power port cap on Link 2500 unit. Plug USB C side cable into the Terminal/PinPad to charge unit.

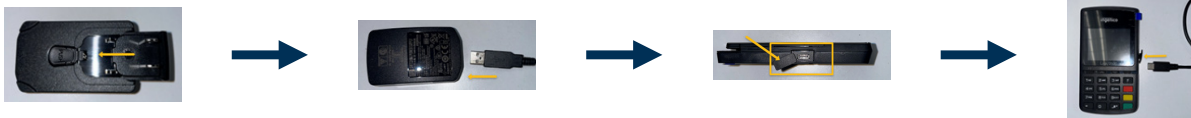

b. Move 5000: Plug adapter into the wall, and cord into the unit.



**3** The Unit will boot to “Terminal Not Registered” Screen and/or Fortis screen.



Link 2500



Move 5000

**4** Connecting to WiFi

- On the pin-pad, press 2634 then the F (Link 2500) or circle key (above red x key on Move 5000)
- Select Tetra Admin
- Select Configure Wi-Fi
- Select Enable
- Select Scan Networks
- Tap on your wireless network, and enter the password
- Confirm to connect by pressing green button
  - The Wi-Fi icon in the top left of the screen will change from White/Yellow to Green
- Press the red X (4-6 times) until you return to the home screen

- 5** If unit already displayed the Fortis logo, skip to Step 6, if not, proceed with following steps:
- While unit is plugged into power, hold the Yellow key and # key until the device reboots
  - The Unit will boot up, through 1-3 boot cycles, and upon completion remain on the Fortis logo screen
  - This process may take several minutes depending on internet connection speeds

**6** Once unit is powered on and remains on the Fortis logo screen, the Terminal/PinPad is ready for use on Fortis Gateway and/or integrated solution.



Link 2500



Move 5000